

INSTRUCTIONS

1. HOW TO SET UP / INSTALL - setting up a LEADSINGER mic is very similar to connecting a DVD player to TV.

- A. Connect Yellow, Red, & White Connectors to the corresponding "line in" jacks on your TV.
- B. Connect AC Adapter to the cable & plug into a power outlet.
- C. Set TV viewing to corresponding TV/Video "line in"


PLUG-N-PLAY

Works with any TV and you are ready to sing!



3. HOW TO SET UP DUET MIC


Plug in an optional LEADSINGER duet mic to the corresponding jack (black) at the end of cable.

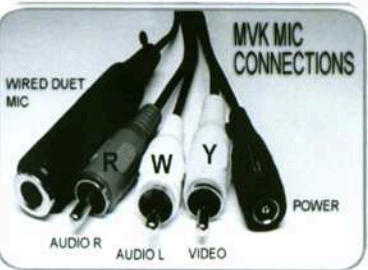

INSTRUCTIONS

HARDWARE SPECIFICATION:

- 1. SD Memory Card - Maximum 8 GB
- 2. Duet MIC input & volume control (duet mic optional)
- 3. NTSC CVBS Video output, 1Vpp
- 4. 5 button key input (Left, Right, Up, Down, & SEL)
- 5. Power On/Off button
- 6. Power Supply: DC 6-9V, 0.5A
- 7. Stereo Audio Output
- 8. Weight: 200 g

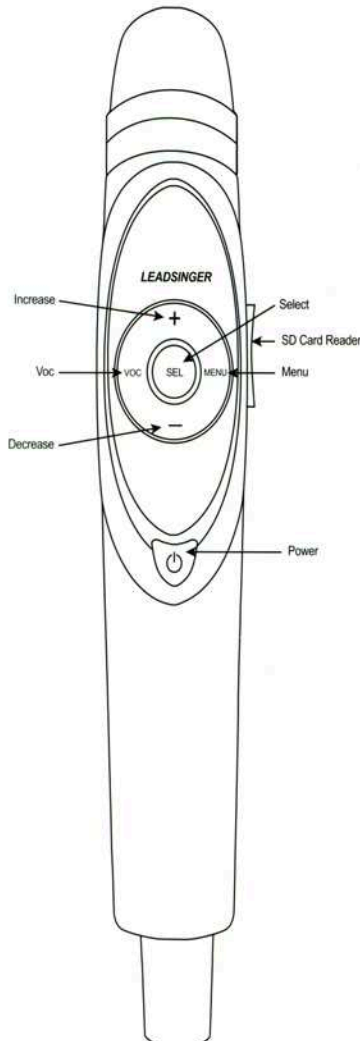

INSTRUCTIONS

1. "POWER" BUTTON

- A. Power ON: Press for two seconds
- B. Power OFF: Press for two seconds

2. FAST START:

- A. Scroll up & down using "+" or "-" & press SEL (center button) to play a song. Press SEL again to pause during play. Press SEL for 2-3 seconds to STOP play.
- B. Choose from different folders on the SD card by pressing MENU (right button). Then select songs using "+" or "-" buttons. Press "+" or "-" buttons for more than 2 seconds for speed scroll.
- C. Hold MENU for 2 seconds to access audio settings and adjust: Surround Sound, Equalizer, Band Mode, and Key.

3. DURING PLAY:

Press MENU during play to adjust VOLUME, MIC VOLUME, ECHO, PLAY TYPE, KEY PITCH (use "+" or "-" buttons to adjust).

SUPPORTED FORMAT:

- 1. File Format: MP3, AVI, MPEG-1, MPEG-2, MPEG-4, DivX (with SMI text file), MPG, DAT
- 2. Text file - English only
Please visit our website for the latest firmware.
- 3. As this is not a song learning tool, enclosed CDMG karaoke files do not provide melody guide. You should listen to MP3 or CD versions before singing in order to sing the songs as originally intended.

INSTRUCTIONS

LEADSINGER (the "Company") warrants, for 90 days from the date of purchase, its products to be free from defective material and workmanship, within generally accepted industry standards. The liability of the Company under this warranty shall be limited, at the Company's option, to the repair or replacement of any product found to be defective within the meaning of this warranty. The purchaser should send the product, with a copy of the purchase receipt, to the Company's address along with Return Authorization number as obtained via email at service@KaraokeSolution.com

This warranty does not apply where:

- 1. repairs or attempted repairs have been made by others;
- 2. product has been abused, misused, or improperly maintained.

WEBSITE

Download additional songs at WWW.LEADSINGER.COM



Your Download Card Number:
84PQSR5WTX3NRF46JL9D

First redeem your download card, then save your songs to your computer. Copy them to any additional SD card, insert it in to your microphone and start singing!